

Functional
Safety
Type
Approved

www.tuv.com
ID 0600000000

Operating and assembly instructions

Incremental encoder with functional safety

FG 41 in solid shaft design

certified according to EN 61508 part 1-7:2010 / IEC 62061:2015 SIL CL2 and
EN ISO 13849-1: PL d

and according to EN 61508 Part 1-7:2010 / IEC62061:2015 SIL CL3 and
EN ISO 13849-1: PL e

**Read the operating and assembly instructions prior to
assembly, starting installation and handling!
Keep for future reference!**

Manufacturer / Publisher

Johannes Hübner

Fabrik elektrischer Maschinen GmbH

Siemensstr. 7

35394 Giessen / Germany

Phone: +49 641 7969 0

Fax: +49 641 73645

Internet: www.huebner-giessen.com

E-mail: info@huebner-giessen.com

Further current information on this product series can be found online in our Service Point.

Simply scan the QR Code and open the link in your browser.



Trademarks

Loctite® is a registered trademark of Henkel AG & Co. KG, Düsseldorf. Brand names and product names are trademarks or registered trademarks of their respective owner. Protected trademarks bearing a TM or ® symbol are not always depicted as such in the manual. However, the statutory rights of the respective owners remain unaffected.

Copyright

It is strictly forbidden to reproduce this publication or parts of this publication in any form or by any means without the prior written permission of Johannes Hübner Fabrik elektrischer Maschinen GmbH. Content information, text, drawings, graphics, and other representations are protected by copyright and are subject to commercial property rights. Duplications of any kind that are not combined with use of the machine are prohibited without manufacturer's written consent. Actions to the contrary make damage compensation mandatory.

Copyright© Johannes Hübner Fabrik elektrischer Maschinen GmbH

Change reservation

The manual has been drawn up with the utmost care and attention. Nevertheless, we cannot exclude the possibility of errors in form and content.

All rights, subject to errors and changes due to technical improvements reserved.

Font styles

Italic or **bold** font styles are used for the title of a document or are used for highlighting.

`Courier-New` font displays text, which is visible on the screen and software/software menu selections.

Contents

1 General Information	6
1.1 Applicability	6
1.2 Abbreviations and terms used	6
1.3 General functional description	7
1.3.1 Main Features	9
1.3.1.1 Variant 1 (FG 41 SIN/COS)	9
1.3.1.2 Variant 2 (FG 41 TTL/HTL)	9
1.3.2 Principle of the safety function	9
2 Basic safety instructions	10
2.1 Explanation of symbols and notes	10
2.2 General risks when using the product	11
2.3 Intended use	11
2.4 Non-intended use	12
2.5 Safety functions of the fail-safe processing unit	12
2.5.1 Mandatory safety checks / measures	13
2.6 Warranty and liability	14
2.7 Declaration of Conformity	14
2.8 Organizational measures	14
2.9 Personnel selection and qualification; basic obligations	15
2.10 Safety information	16
3 Transport, packaging and storage	17
3.1 Safety instructions for transport	17
3.2 Incoming goods inspection	17
3.3 Packaging / disposal	17
3.4 Storage of packages (devices)	18
4 Technical Data	19
4.1 Safety	19
4.2 Electrical characteristics	20
4.2.1 General	20
4.2.2 Device-specific	21
4.3 Ambient conditions	22
4.4 Mechanical characteristics FG 41	23
4.5 Type code	24
4.6 Type plate	24
5 Assembly	25
5.1 Safety instructions	25
5.2 Technical notes	26
5.3 Required tools	26
5.4 Mounting preparations	26
5.5 Mounting of FG 41, construction type B5 (flange)	27
5.6 Mounting of encoders in construction type B35 (flange and foot)	29
5.7 Dismantling the FG 41	30
6 Installation / Preparation for Commissioning	31
6.1 Electrical connection Terminal box connection	31
6.2 EMC requirements	32
6.3 EMC conform wiring schemes	33
6.3.1 Connection scheme 1	33

6.3.2 Connection scheme 2.....	33
6.3.3 Connection scheme 3.....	34
6.4 Ground connection – measuring system	35
6.5 Cable specification	35
6.6 Permitted cable length.....	36
6.6.2 Square wave incremental-signals (TTL/HTL)	37
6.7 Connection instructions for plug connection	38
7 Incremental interface	38
7.1 Variant 1, analog incremental signals (SIN/COS).....	39
7.2 Variant 2, square - wave incremental signals (TTL/HTL)	40
8 Connection diagram.....	41
9 Replacing the Measuring System	42
10 Checklist.....	43
11 Maintenance	44
12 Accessories.....	45
12.1 Mating connector	45
12.2 Mounting kit friction-enhancing shims	45
12.3 Coupling.....	46
13 Dimension drawings	47
13.1 FG 41, construction type B5	47
13.2 FG 41 construction type B35 (flange and foot)	50

1 General Information

These operating and assembly instructions contain the following topics:

- General functional description
- Basic safety instructions with declaration of the intended use
- Characteristics
- Assembly
- Installation/Commissioning
- Error causes and remedies

The operating and assembly instructions are supplementary to other documentation, such as product data sheets, dimension drawings, dimension drawings, prospects, etc.

The scope of delivery includes the incremental encoder FG 41 and the operating and assembly instructions.

The operating and assembly instructions may be requested separately.

1.1 Applicability

These operating and assembly instructions apply exclusively for the following measuring system series with **incremental-interface** and **functional safety**:

- FG 41

The measuring system stands out due to 2 variants which are distinguished in the chapter “Main features” on page 7.

The products are labelled with affixed nameplates and are components of a system.

The following documentation therefore also applies:

- operator’s operating instructions specific to the system
- these operating and assembly instructions

1.2 Abbreviations and terms used

FG 41	Incremental encoder
DCavg	D iagnostics C overage Average diagnostic coverage
ESD	E lectro S tatic D ischarge
EU	E uropean U nion
EMC	E lectro M agnetic C ompatibility
Functional safety (FS)	Part of the overall system safety, which depends on the correct functioning of safety-related systems for risk reduction. Functional safety is ensured when each safety function is executed as specified.
Fault exclusion	Compromise between the technical safety requirements and the theoretical possibility of an error occurring
HTL	H igh- T hreshold- L ogic
IEC	International Electrotechnical Commission
IEEE	I nstitute of E lectrical and E lectronics E ngineers
ISO	I nternational S tandard O rganisation
MTTFd	M ean T ime T o F ailure (d angerous) Mean time until dangerous failure

PFD _{av}	Average Probability of Failure on Demand Average probability of failure of a safety function with low demand
PFH	Probability of Failure per Hour Operating mode with high requirement rate or continuous demand. Probability of dangerous failure per hour.
PFH _D	Probability of a dangerous Failure per Hour Average probability of a dangerous failure per hour according to ISO 13849-1.
PL	Performance Level , according to ISO 13849-1: Discrete level, which specifies the capability of safety-related parts of a control to execute a safety function under foreseeable conditions.
SIL	Safety Integrity Level , according to IEC 62061: Four discrete levels (SIL1 to SIL4). The higher the SIL of a safety-related system, the lower the probability that the system cannot execute the required safety functions.
SIS	Safety Instrumented System : is used to protect a dangerous process and reduce the risk of an accident. Process instruments are a constituent of a Safety Instrumented System. This comprises the essential components of a complete safety-relevant process unit: Sensor, fail-safe processing unit (control) and actuator
SCS	Safety Computer System with control function
STP	Shielded Twisted Pair
TTL	Transistor-Transistor-Logik (RS422)
VDE	Verband der Elektrotechnik, Elektronik und Informationstechnik (Association for Electrical, Electronic and Information Technologies)
Repeat test (proof test)	Repetitive test to detect hidden dangerous failures in a safety-related system.

1.3 General functional description

The rotary measuring system FG 41 is a safe and incremental position measuring system.

The measuring system has been designed so that it can be used in systems which require the following safety functions according to EN 61800-5-2:

- Safe Direction (SDI)
- Safe Stop 1 (SS1)
- Safe Stop 2 (SS2)
- Safe Operating Stop (SOS)
- Safely Limited Speed (SLS)
- Safe Speed Range (SSR)
- Safe Speed Monitor (SSM)
- Safely-Limited Acceleration (SLA)
- Safe Acceleration Range (SAR)
- Safely-Limited Position (SLP)
- Safely-Limited Increment (SLI)
- Safe Cam (SCA)

The measuring system as a sensor is always part of a safety chain.

The following shaft designs can be used for the mechanical coupling:

- Solid shaft

Depending on the safety functions safety-related differences arise:

- SIL3/PLe/Kat.3,
in conjunction with velocity oriented safety functions

- SIL2/PLd/Kat.3,
in conjunction with positioning oriented safety functions

see chapter „Safety information“ -> „functional safety“ on page 19.

1.3.1 Main Features

The entire system electronics has a discrete design. Neither microcontrollers nor programmable logic elements are contained in the system electronics. There is no interpolation or signal multiplexing. All signal lines are led separately within the electronics.

1.3.1.1 Variant 1 (FG 41 SIN/COS)

Incremental interface with analog output signals SIN_{\pm} , COS_{\pm} and Ref_{\pm} ; output level 1 V_{ss}.

The safety-evaluated measuring system is designed for the implementation of safety-related functions in relation to speed and direction of rotation. In the downstream fail-safe processing unit an ideal error detection also occurs through evaluation of the annulus relationship " $SIN(x)^2 + COS(x)^2 = 1$ ".

The Ref_{\pm} reference signals are not evaluated from a safety viewpoint and may not be used for safety-oriented purposes.

1.3.1.2 Variant 2 (FG 41 TTL/HTL)

Incremental interface with digital square-wave output signals 0° , $\overline{0^{\circ}}$, 90° , $\overline{90^{\circ}}$ und N , \overline{N} , output level in TTL or HTL logic.

The safety-evaluated measuring system is designed for the implementation of safety-related functions in relation to speed and direction of rotation.

An internal signal monitor constantly checks the annulus relationship " $SIN(x)^2 + COS(x)^2 = 1$ ". Safety-relevant errors are indicated by switching of the signal outputs to tri-state. The $K0_{\pm}$ reference signals are not evaluated from a safety viewpoint and may not be used for safety-oriented purposes.

1.3.2 Principle of the safety function

System safety results when:

- the scanning channel is single fault safe thanks to its own diagnostic measures and circuit measures
- the control checks that the received incremental data meet the expected tolerance window according to the application.
- for variant 1, the control also checks the annulus relationship $SIN(x)^2 + COS(x)^2 = 1$; if the result is outside the tolerance range, the incremental data must be evaluated as unsafe. In this way the control achieves an ideal error detection.
- when errors are detected the control introduces appropriate safety measures defined by the system manufacturer
- the system manufacturer ensures, through correct mounting of the measuring system, that the measuring system is always driven by the axis to be measured and is not overloaded. A fault exclusion is required for mounting the measuring system to the drive function.
- the system manufacturer carries out a proven test during commissioning
- the downstream fail-safe processing unit evaluates the measuring system differentially

2 Basic safety instructions

2.1 Explanation of symbols and notes

Warnings are indicated by symbols in these operating and assembly instructions. The warnings are introduced by signal words that express the scope of the hazard.

The warnings must be strictly heeded; you must act prudently to prevent accidents, personal injury, and property damage.



DANGER!

Means that death or serious injury will occur if the required precautions are not met.



WARNING!

Means that death or serious injury can occur if the required precautions are not met.



CAUTION!

Means that minor injuries can occur if the required precautions are not met.



NOTICE!

Indicates a possibly dangerous situation that can result in material damage if it is not avoided.



NOTES!

Indicates important information or features and application tips for the product used.



NOTES!

Means that appropriate ESD-protective measures are to be considered according to EN 61340-5-1 supplementary sheet 1.



NOTES!

Do not use a hammer or similar tool when installing the device due to the risk of damage occurring to the bearings or coupling!

2.2 General risks when using the product

The product, hereinafter referred to as *the measuring system*, is manufactured according to state-of-the-art technology and accepted safety rules. **Nevertheless, non-intended use can pose a danger to life and limb of the user or third parties, or lead to impairment of the measuring system or other property!**

Only use the measuring system in perfect technical condition, and only for its intended use, paying attention to safety and dangers, and in compliance with the **operating and assembly instructions!** Faults which could threaten safety should be eliminated without delay!

2.3 Intended use

The safety measuring system can be used for the detection of angular movement and processing of measured data for a downstream safety computer system in systems in which the **protection goals** of "Protection of speed" and "Protection of direction of movement" must be safely achieved. The complete processing chain of the safety function must then satisfy the requirements of the applied safety standard.

The safety measuring system may only be used in safety applications in conjunction with a control certified according to the applied safety standard.

The system manufacturer must check that the characteristics of the measuring system satisfy his application-specific safety requirements. The responsibility or decision regarding the use of the measuring system lies with the system manufacturer.

Intended use also includes:

- observing all instructions in this operating and assembly instructions,
- observing the nameplate and any prohibition or instruction symbols on the measuring system,
- observing the operating instructions from the machine/system manufacturer,
- operating the measuring system within the limit values specified in the technical data,
- ensuring that the fail-safe processing unit (F-Host) fulfils all required safety functions,
- observing and using the checklist in the Appendix,
- safe mounting (form-closed) of the measuring system to the driving axis, also see chapter "Assembly" from page 25.

2.4 Non-intended use



WARNING! NOTICE!

Danger of death, physical injury and damage to property in case of non-intended use of the measuring system!

The following areas of use are especially forbidden:
in environments where there is an explosive atmosphere
for medical purposes
fastening transport or lifting tackle to the device,
for example a crane hook to lift a motor
fastening packaging components to the device,
for example ratchet straps, tarpaulins etc.
using the device as a step,
for example by people to climb onto a motor

2.5 Safety functions of the fail-safe processing unit

The **Safety Computer System (SCS)**, to which the measuring system is connected, must perform the following safety checks.

With regard to "Single fault safety" and "Ideal error detection" please see IFA directive "GS-IFA-M21".



NOTES!

To enable the correct measures to be taken in the case of an error, the following applies:

- **Safe state – passive, only for measuring system variant 1**

In passive safe state the measuring system does not output any valid SIN_{\pm}/COS_{\pm} – signals to the downstream fail-safe processing unit. The processing unit detects the error through evaluation of the annulus relationship $SIN(x)^2 + COS(x)^2 = 1$. If the result is outside the tolerance range, the incremental data are evaluated as unsafe. The downstream fail-safe processing unit has an ideal error detection.

- **Safe state – active, only for measuring system variant 2**

In active safe state the signal outputs are switched to tri-state. The processing unit detects the error via an implemented cable breakage detection.

2.5.1 Mandatory safety checks / measures

Measures for commissioning, changes	SCS error reaction
Check that the desired automation task is executed as required.	STOP
Check by the SCS	SCS error reaction
Check of incremental data according to the present automation task and safety function.	STOP
Two-channel monitoring of incremental outputs for cable breakage.	For tri-state state -> STOP
Only for variant 1 Evaluation of the condition $\sin^2(x) + \cos^2(x) = 1$. The number of checks / revolution corresponds to the number of periods/revolution: 1024, 2048 or 4096 For the safety functions SDI, SS1, SS2, SOS, SSR, SSM an annulus monitoring with DC = 90 % is required. For the SLS safety function a two-channel evaluation of the frequency from (SIN/COS) with a DC of 90 % is required.	If outside tolerance -> STOP
Only for variant 2 A cable break detection is required for the evaluation of the square pulse signals. In the safe state, the output drivers are in tri-state (high-resistance state).	If a cable break is detected -> STOP
Only for variant 2 Evaluation of the incremental data in differential mode and verification with respect to antivalence, quadrature and against phase equivalence between channels A and B	If outside tolerance -> STOP

2.6 Warranty and liability

In principle the "General Terms and Conditions" of Johannes Hübner - Fabrik elektrischer Maschinen GmbH apply. These are available to the operator with the Order Confirmation or when the contract is concluded at the latest. Warranty and liability claims in the case of personal injury or damage to property are excluded if they result from one or more of the following causes:

- Non-observance of these operating and assembly instructions
- Non-intended use of the measuring system
- Improper assembly, installation and start-up of the measuring system
- Work carried out incorrectly on the measuring system
- Operation of the measuring system with technical defects
- Mechanical or electrical modifications to the measuring systems undertaken autonomously
- Repairs carried out autonomously
- Third party interference and Acts of God
- Deployment of non-qualified personnel
- Opening of the measuring system or modifying it

2.7 Declaration of Conformity

The device is tested in accordance with the following Directives:

- 2006/42/EG, 2014/30/EU and 2011/65/EU (EU)
- S.I. 2008/1597, S.I. 2016/1091 und S.I. 2012/3032 (UK).

2.8 Organizational measures

- The operating and assembly instructions must always be kept ready-to-hand at the place of use of the measuring system.
- In addition to the operating and assembly instructions, generally valid legal and other binding regulations on accident prevention and environmental protection must be observed and communicated.
- The respective applicable national, local and system-specific provisions and requirements must be observed and communicated.
- The operator is obliged to inform personnel on special operating features and requirements.
- Prior to commencing work, personnel working with the measuring system must have read and understood the **chapter 2 "Basic safety instructions" on page 10**.
- The nameplate and any prohibition or instruction symbols applied on the measuring system must always be maintained in a legible state.
- Do not undertake any mechanical or electrical modifications to the measuring system, except for those expressly described in this operating and assembly instructions.
- Repairs may only be undertaken by the manufacturer or a center or person authorized by the manufacturer.

2.9 Personnel selection and qualification; basic obligations

- All work on the measuring system must only be carried out by qualified personnel.
- Qualified personnel includes persons, who, through their training, experience and instruction, as well as their knowledge of the relevant standards, provisions, accident prevention regulations and operating conditions, have been authorized by the persons responsible for the system to carry out the required work and are able to recognize and avoid potential hazards. They are capable of identifying and avoiding potential hazards.
- The definition of “qualified personnel” also includes an understanding of the standards VDE 0105-100 and IEC 364 (source: e.g. Beuth Verlag GmbH, VDE-Verlag GmbH).
- The responsibility for assembly, installation, commissioning and operation must be clearly defined. The obligation exists to provide supervision for trainee personnel.

2.10 Safety information



WARNING! NOTICE! NOTES!

Destruction, damage and malfunction of the measuring system!

Only carry out wiring work or opening and closing of electrical connections with the system de-energized.

Do not undertake any welding work if the measuring system is already wired or switched on.

Falling below or exceeding the permissible operating temperature limit values must be prevented through an appropriate heating/cooling measure at the place of installation.

The measuring system must be installed so that no direct moisture can affect the measuring system.

Suitable aeration/ventilation and heating/cooling measures must be provided at the place of installation to prevent the temperature falling below the dew point (condensation).

If an overvoltage of > 7 V DC is accidentally applied to the incremental analog output signals SIN+, SIN-, COS+, COS-, Ref+ or Ref-, the measuring system must be checked at the factory, stating the reasons or circumstances. The measuring system must be taken out of operation immediately.

Potential hazards resulting from interactions with other systems and equipment which are or will be installed in the vicinity must be checked. The user is responsible for taking appropriate measures.

The power supply must be protected with a fuse suitable for the supply lead cross-section.

Cables used must be suitable for the temperature range.

A defective measuring system must not be operated.

Make sure that the installation environment is protected from aggressive media (acids etc.).

Avoid shocks (e.g. hammer blows) to the shaft during installation.

The use of the devices as a step, etc. is not intended use.

Opening the measuring system is forbidden.

The type plate specifies the technical characteristics of the measuring system. If the type plate is no longer legible or if the type plate is completely missing, the measuring system must not be operated.

In case of storage as well as in the operation of the measuring system unused connecting plugs have to be provided either with a mating connector or with a protective cap. The IP protection class is to be selected according to the requirements.



NOTES!

The measuring system contains components and assemblies susceptible to electrical discharge, which can be destroyed if incorrectly handled.

- Touching the measuring system connection contacts with the fingers must be avoided or the relevant ESD protective measures must be applied.



NOTES!

Disposal

- If disposal has to be undertaken after the lifespan of the device, the respective applicable country-specific regulations are to be observed.

3 Transport, packaging and storage



NOTES!

Shipping information

- Do not drop the device or subject it to heavy impacts!
The device contains an optical system.
- Use only the original packaging.
Inappropriate packaging material may cause damage to the unit in transit.
- Storage temperature: -40 °C...+85 °C
- Store in a dry place.

3.1 Safety instructions for transport



NOTICE!

Material damage caused by improper transport!

Observe the symbols and information on the packaging:

- Do not throw – risk of breakage
- Keep dry
- Do not expose to heat above 40°C or direct sunlight.

3.2 Incoming goods inspection

Check delivery immediately upon receipt for completeness and possible transport damage. Inform the forwarder directly on receipt of the goods about existing transport damages (prepare pictures for evidence).

3.3 Packaging / disposal

The packaging is not taken back and must be disposed of in accordance with the respective statutory regulations and local guidelines.

3.4 Storage of packages (devices)



Keep dry

Keep packages dry and free from dust; protect from moisture



Protect against heat

Protect packages from heat above 40° C and direct sunlight

If you intend to store the device for a longer period of time (> 6 months) we recommend you use protective packaging (with desiccant).



NOTES!

Turn the shaft of the device every 6 month to prevent the bearing grease solidifying!

4 Technical Data

4.1 Safety

Functional safety	
EN 61508 Part 1-7	Safety Integrity Level (SIL)
⁽¹⁾ SDI, SS1, SS2, SOS, SLP, SLI, SCA	-2
⁽¹⁾ SLS, SSR, SSM, SLA, SAR	-3
EN ISO 13849-1	Performance Level (PL)
⁽¹⁾ SDI, SS1, SS2, SOS, SLP, SLI, SCA	- PLd / Kat. 3
⁽¹⁾ SLS, SSR, SSM, SLA, SAR	- PLe / Kat. 3
Startup time	Time between POWER-UP and safe incremental output
Variant 1	≤ 30 ms
Variant 2	≤ 50 ms
PFH / PFHD, "High demand" operating mode	
Variant 1	5,34 * 10 ⁻⁹ 1/h
Variant 2	6,57 * 10 ⁻⁹ 1/h
Notice	Measuring system is used only in applications with high or continuous demand rate
MTTF_d	high
Variant 1	1558 a
Variant 2	622 a
⁽²⁾ DC_{avg}	Medium (90 %)
Internal process safety time	Time between occurrence of an F-Error and alarm indication
Overall system	≤ 1 ms
Process safety angle	Angle between error occurrence and alarm indication
Through channel-internal self-diagnosis	± 0.3510°, at 1024 periods; ± 0.1760°, at 2048 periods; ± 0.0879°, at 4096 periods; in relation to the measuring system shaft
T₁ repeat test (proof test)	20 years

⁽¹⁾ according to EN 61800-5-2

⁽²⁾ The assessment occurred in accordance with Note 2 on Table 6 of EN ISO 13849-1

4.2 Electrical characteristics

4.2.1 General

Supply voltage	12...30 V DC acc. to IEC 60364-4-41, SELV/PELV
Reverse polarity protection	Yes
Short-circuit protection	Yes, by internal 1 A safety fuse
Overvoltage protection	Yes, up to ≤ 60 V DC
Current consumption without load	at 24 V DC
Analog output signals	< 20 mA
Square-wave output signals	< 40 mA

4.2.2 Device-specific

Accuracy	
Usable resolution	10 bit, 11 bit, 12 bit; depending on the device configuration
Safety-related	+ 2 bit interpolated
Functional	+ 8 bit interpolated
Variant 1	
Incremental analog output signals	
Periods / revolution	1024, 2048, 4096 acc. to device variant
Incremental signals	SIN+, SIN-, COS+, COS-
Track position, electrical	90 °
Reference signals	N, \bar{N} , once per revolution
Output level	1 V _{ss} ± 0.2 V at 100 □, differential
Output current	20 mA
Output frequency	≤ 500 KHz
Short-circuit proof	Yes
Cable specification	see page 35
Variant 2	
Pulses / revolution	1024, 2048, 4096 acc. to device variant
Incremental signals	0°, $\bar{0}^\circ$, 90°, $\bar{90}^\circ$
Track position, electrical	90 °
Zero pulse	N, \bar{N} , once per revolution
Output level TTL	EIA standard RS422 (2-wire)
Output level HTL	Push-pull, supply voltage
Output current	50 mA, per channel
Output frequency	≤ 100 KHz
Short-circuit proof	Yes
Cable specification	see page 35

4.3 Ambient conditions

Vibration	
EN 60068-2-6	≤ 100 m/s ² , sine 50-2000 Hz
Shock	
EN 60068-2-27	≤ 1000 m/s ² , half-sine 11 ms
EMC	
Immunity to disturbance	EN 61000-6-2
Transient emissions	EN 61000-6-3
Working temperature	-40 °C...+85 °C
Ambient temperature (Ta) solid shaft	$T_a = 84,1 - (0,004 \cdot n)$ in °C n = speed in rpm
Storage temperature	-40 °C...+85 °C, dry
Relative air humidity, EN 60068-3-4	98 %, non-condensing
Degree of protection EN 60529 (valid with screwed-on mating connectors or blind plugs and captive screw plug NDE)	IP66/IP67
Corrosion resistance	Seawater resistant

4.4 Mechanical characteristics FG 41

Mechanically permissible speed	
Degree of protection IP66/IP67	≤ 4000 rpm
Note	Observe ambient temperature for permissible working temperature
Electrically permissible speed	
$n_{electric} [rpm] = (\text{output frequency [Hz]} / \text{no. of pulses per rev.}) * 60 \text{ rpm}$	
Shaft load axial/radial	
Max. Load on the encoder shaft	$F_{a,} (\text{axial}) = \leq 300 \text{ N}$ $F_{r,} (\text{radial}) = \leq 300 \text{ N}$
Bearing life time	$\geq 3,9 * 10^{10}$ revolutions (*)
Permissible angular acceleration	$\leq 10^4 \text{ rad/s}^2$
Moment of inertia	
Degree of protection IP66/IP67	approx. 310 gcm ²
Breakaway torque	
Degree of protection IP66/IP67	approx. 5.0 Ncm
Mass	approx. 3.6 kg

(*) Under the following assumptions: max. shaft load: 2000 rpm , 55°C. $F_{a,} (\text{axial}) = 100 \text{ N}$.
 $F_{r,} (\text{radial}) = 120 \text{ N}$; Based on **ISO/TS 16281**

4.5 Type code

FG 41	FG	41	G-90G-NG	/
Incremental encoder				
Construction type = solid shaft B5 (flange) or B35 (flange and foot)				
Series				
Connections T = 12-pole round plug M23 K = Terminal strip in terminal box				
Pulses per rotation 1024, 2048, 4096				
Signalamplitude H = HTL T = TTL S = Sin/Cos				
Signal-output = Basic version 0°, 90°, each with inverted signals (zero pulse not safety certified)				
Shaft with feather = solid shaft Ø 14j6 mm				

4.6 Type plate



The nameplate and UKCA label are located on the side of the housing and contain the following information:

General information

- Manufacturer, Address, CE marking
- Type
- Serial number (S/N)
- Date of manufacturing
- Order number (ID)
- Supply voltage
- Certification (Safety: CE and UKCA)
- QR-Code

Incremental encoder

- Degree of protection IP
- Pulse rate
- Outputs
- Signal level

5 Assembly

5.1 Safety instructions



WARNING!

At assembly, dismantling and other work to the device the basic safety instructions to chapter 2 must be observed.

The assembly, dismantling and other work of the measuring system must only be carried out by qualified personnel!



DANGER! NOTICE!

Danger of death, serious physical injury and/or damage to property due to deactivation of safety functions, caused by an unstable shaft drive!

- The system manufacturer must implement suitable design measures, so that the drive of the measuring system is ensured at all times through the shaft and mounting of the measuring system (fault exclusion). The specifications of **DIN EN 61800-5-2:2017-11** Adjustable speed electrical power drive systems, Safety requirements, Table D.8 – Motion and position sensors" must be observed.
- In general, the requirements and acceptance conditions for the complete system must be taken into account for mounting.
- The measuring system must be inspected on a regular basis (see below). Inspections must be recorded in a log book.

As the installation situation is application-dependent, the following notes are not exhaustive.

- All fastening screws must be secured against unintentional loosening. All screwed connections must be inspected once a year.
- In case of applications with low operating temperatures, increased values for the start-up torque result. This fact is to be considered when the assembling and shaft drive is performed.
- After approx. 16 000 - 20 000 hours of operation or higher levels of continuous load:
Check deep groove ball bearings for noise, running smoothly. Bearings must be replaced by the manufacturer only.
- A suitable coupling with form closure must be used for the application. The coupling must be dimensioned so that fault exclusion is ensured for the mechanical mounting of the measuring system in accordance with DIN EN 61800-5-2, depending on the static and dynamic load cases. If this is not possible, the hazard must be incorporated into the risk assessment for the application in the form of a coupling breakage.
- The coupling manufacturer's information and installation requirements must be observed.

In particular, you must ensure that:

- the coupling is suitable for the specified speed and the potential axial offset,
- installation is on a grease-free shaft,
- the coupling and the measuring system are not axially loaded,
- the clamping screws are tightened with the torque defined by the coupling manufacturer,
- the screws are secured against unintentional loosening
- Axial slipping of the measuring system on the drive shaft must be prevented by the coupling fixing, see Figure 1

- Radial slipping (slip) of the measuring system on the drive shaft must be prevented by means of form closure by using a parallel key / groove combination (Figure 1,) a coupling with groove must be used for this purpose.

5.2 Technical notes



NOTES!

The use of a hammer or similar tool during assembly, disassembly and other work on the device is not permitted due to the risk of damage to ball bearings and coupling!

Ambient temperature

The max. permissible ambient temperature depends on the speed and degree of protection of the device and the place of installation.

Degree of protection

The device complies with the specified degree of protection (see chapter 4.3 "Ambient conditions" on page 22) only with screwed-on mating connectors or blind plugs!

Deep groove ball bearings

Incremental encoders FG 41 are fitted with maintenance-free, greased "for-life" deep groove bearings. Bearings must be changed by the manufacturer only.

Opening the encoder renders the guarantee null and void.

Screw retention

All fastening screws must be secured against unintentional loosening. We recommend using Loctite® 243 (thread locker medium strength).

5.3 Required tools

- Spanners: 10 mm, 22, 24 mm, Allen key: 2 mm, 3 mm
- Flat-blade screwdriver, assembly grease, Loctite® 243 (medium strength thread locker)

5.4 Mounting preparations

Ensure all accessories are available.



NOTES!

Earth cable is not included in the scope of delivery.

- Preparing the place of attachment: Clean the (motor) shaft, centering, bolting surfaces and fastening threads; check for damage. Repair any damage!

5.5 Mounting of FG 41, construction type B5 (flange)



NOTES!

- Mounting example and tightening torques (dimension drawing see chapter 13). The installation described below is offered as an example only and may vary according to the coupling and flange type. It is essential to observe the specific instructions provided by the manufacturer of the coupling.
- You must be able to mount the coupling without force.
- If possible, fit the intermediate flange (7) in a manner that ensures the screwed sealing plug (17) points downwards.
- If possible, fit the device in a manner that ensures the cable gland (20) points downwards Exchange the position of the cable gland (20) and the blanking plug (18), if necessary.
- To carry out step 9, it may be necessary to turn the drive shaft (1) to the correct position.
- Intermediate disc (5), flange (7) and coupling (4) must meet the requirements for safe mounting. See also Chapter 12.3 .

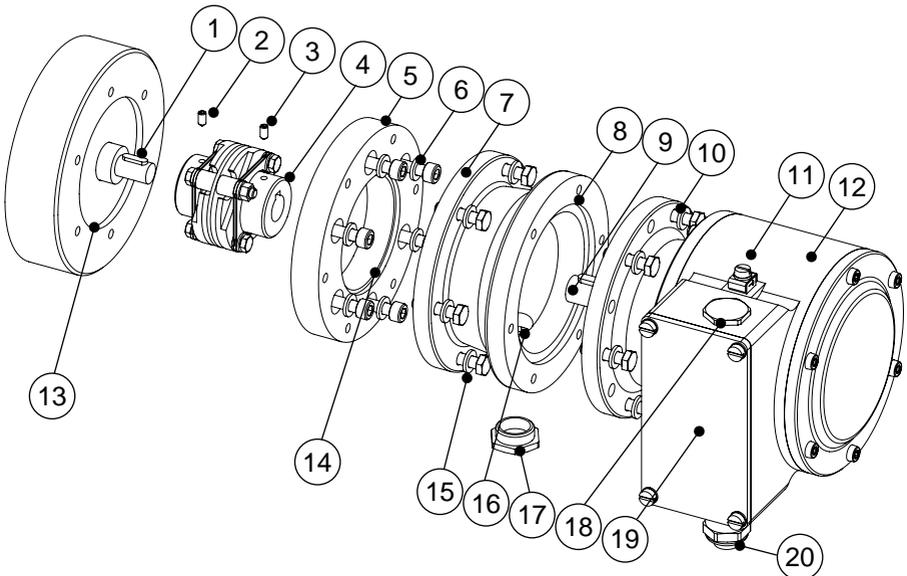


Fig. 1: FG 41 (mounting example B5)

1. Lightly grease the drive shaft (1) and centring (13).
2. Mount the coupling (4) onto the drive shaft.
3. Secure the coupling hub on the drive shaft (1) using the grub screw (2).

4. Fix the intermediate disc (5) on the drive side using the fixing screws and the washers (6).
5. Fix the intermediate flange (7) to the intermediate disc (5) using the fixing screws (15) and washers (15).
6. Lightly grease the shaft of the FG 41 (9).
7. Fit the FG 41 (12) into both the centering (8) and coupling hub (4) at the same time.
8. Secure the FG 41 using at least 6 screws and washers (10) distributed evenly around the circumference of the flange (7)!
9. Remove the screw plug (17) from the access bore (16) to the coupling.
10. Fix the coupling hub onto the shaft using a set screw (3).
11. Close the access bore in the intermediate flange (16) to the coupling with the screw plug 17).

5.6 Mounting of encoders in construction type B35 (flange and foot)



NOTES!

- FG 41 encoders in construction type B35 can be attached by means of a flange (B5 see chapter 5.5) or foot (B35).
- Mounting example (dimension drawing see chapter 13).
The installation described below is offered as an example only and may vary according to the coupling and flange type. It is essential to observe the specific instructions provided by the manufacturer of the coupling.
- You must be able to mount the coupling (7) without force.
- Angle misalignment and parallel displacement between the drive shaft (1) and the FG 41 (4) encoder shaft are mounting errors and should be kept as small as possible.

Mounting errors

- cause radial forces onto the FG 41 shaft.
- reduce the service life of the bearings and the coupling.
- degrade the quality of the signals (harmonic content).

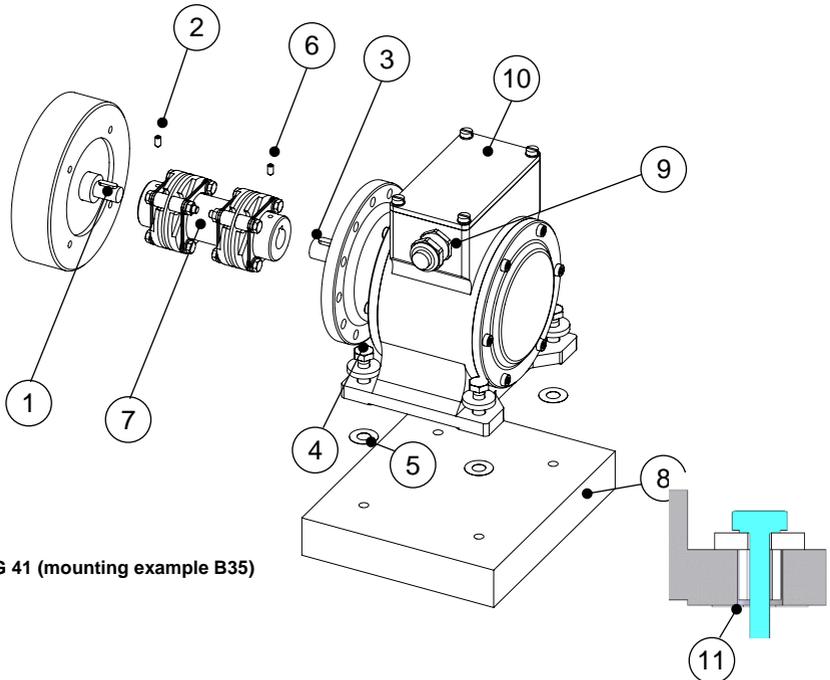


Fig. 2: FG 41 (mounting example B35)

1. Lightly grease the drive shaft (1)
2. Secure the coupling hub on the drive shaft (1) with the set - screw (2).
3. Lightly grease the shaft of the FG 41 (3).
4. Align the FG 41 shaft (3) to the drive shaft (1) and insert into the coupling hub.

5. Fix the foot of the FG 41 to the console (8) with the 4 screws M8 and washers (4) supplied. If the unit is fastened with M6 screws, the 4 sleeves (11) must be inserted into the holes. This is not necessary for M8 screws.



WARNING!

From a shock load of 20 g, friction-enhancing discs (5) must be used. These discs are not included in the scope of delivery. See also chapter 12 .

6. Secure the coupling hub on the encoder shaft using the set - screw (8).

Fastening screws

For the mounting of the FG 41, the following conditions must be observed for proper mounting:

Strength class	Screw	Tightening torque
200...244 N/mm ²	M6x35 - 12.9	10 Nm
245...379 N/mm ²	M6x30 - 12.9	10 Nm
> 380 N/mm ²	M6x25 - 12.9	10 Nm
330...459 N/mm ²	M8x40 - 12.9	26 Nm
> 460 N/mm ²	M8x35 - 12.9	26 Nm



NOTES!

If the minimum tensile strength at the screw-in thread of the customer interface is not observed, suitable measures must be taken (e.g. by using Ensaf bushes).

5.7 Dismantling the FG 41

Remove all electrical connection cables of the FG 41 before dismantling.

To dismantle the FG 41 follow the instructions given in chapter 5.5 or rather 5.6 in the reverse order.



WARNING!

At assembly, dismantling and other work to the device the basic safety instructions to chapter 2 must be observed. The assembly, dismantling and other work on the device may only be carried out by qualified personnel.

6 Installation / Preparation for Commissioning

6.1 Electrical connection Terminal box connection

1. Open the terminal box cover (10) (see Fig. 2).



CAUTION!

Do not allow moisture to enter the terminal box when the cover is open!

2. Remove the cap of the cable gland (9) (see Fig.2).
3. Feed the cable into the terminal box through the cable gland.



NOTES!

The signal cable shielding can be connected directly to the housing via the EMC cable gland. A coil spring integrated in the cable gland ensures all-round contact is made with the bare cable shielding to ensure a good shield connection. This type of shield connection should be preferred.

To achieve an effective shielding the cable shield must also be connected in the electrical cabinet! It must be ensured that no potential equalization currents flow via the shield.

4. Tighten the cable gland and blanking plugs using a spanner.



NOTES!

Prior to delivery cable glands and blanking plugs are tightened finger tight only. To ensure that the terminal box is reliably sealed tighten all cable glands and blanking plugs before starting up for the first time.

5. Use a spanner to tighten the cable gland until the cable is securely clamped and properly sealed.



NOTES!

Prevent lateral pulling forces acting on the cable and plugs so as not to impair the degree of protection of the cable gland.

6. Strip cable insulation, crimp wire-end ferrules.
Connect the supply voltage and signal cable (see. connection diagrams, chapter 8).
7. Close the terminal box cover.



NOTES!

Before closing the terminal box cover check the sealing surface is clean and that the seal is in a good condition; clean or replace damaged seals as necessary.



CAUTION!

Ensure when closing the terminal box cover that no cable becomes jammed.

6.2 EMC requirements



WARNING!


Deactivation of the safety function due to radiated or conducted interference sources!

- Radiated interference sources due to radiophones, lightning strikes in networks, mobile phones and emissions from individual devices can cause malfunctions in the measuring system.
- Conducted interference sources in particular, such as frequency-controlled drives (system perturbations), have a negative effect on the function of the measuring system.
- The 24 V power supplies used must fulfil the requirements according to IEC 60364-4-41 SELV/PELV.
- The shielding effect of cables must also be guaranteed after installation (bending radii!) and after connector changes. In cases of doubt, use more flexible and more reliable cables.
- A 5-wire cable with a PE-conductor isolated from the N conductor (so-called TN network) is recommended for the drive/motor cabling. This will largely prevent equipotential bonding currents and the development of interference.
- A shielded and stranded data cable must be used to ensure high electromagnetic interference stability of the system. The shielding should be connected with low resistance to protective ground using large shield clips at both ends. The shielding should be grounded in the switch cabinet only if the machine ground is heavily contaminated with interference towards the switch cabinet ground.
- Equipotential bonding measures must be provided for the complete processing chain of the system. Compensating currents due to potential differences across the shield to the measuring system must be avoided in particular.
- Power and signal cables must be laid separately. During installation observe the national safety and installation guidelines for data and energy cables.
- Observe the manufacturer's instructions for the installation of converters and for shielding power cables between frequency converter and motor.
- Ensure adequate dimensioning of the energy supply.
- Separation or delimitation of the measuring system from potential jammers.
- Provide the use of filters.
- Observe requirements for external and internal lightning protection.
- To ensure safe and fault-free operation, the pertinent standards and directives must be observed. In particular, the applicable EMC directive and the shielding and grounding directives must be observed!

Upon completion of installation, a visual inspection with report should be carried out.


6.3 EMC conform wiring schemes

6.3.1 Connection scheme 1

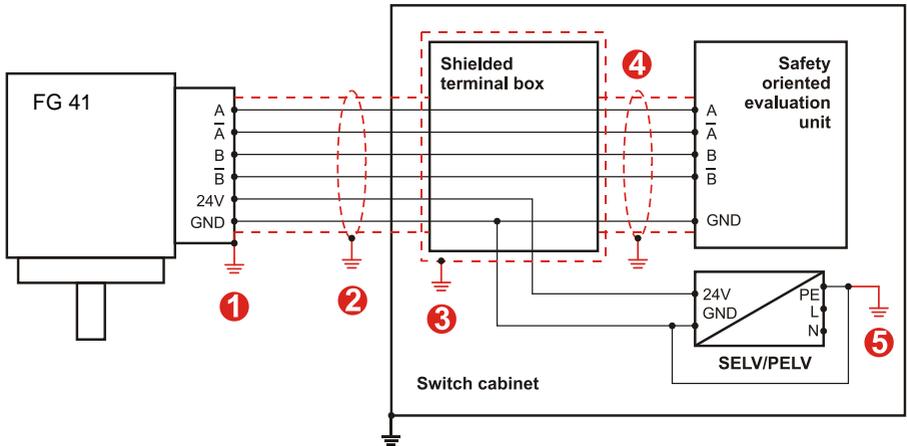


- 1x Ground connection (connection possibilities ①, ②, ③, ④ or ⑤)
- Avoid ground loops
- Connect all shields double-sided
- Shielding must not be interrupted
- Twisted pair wires (A, \bar{A}), (B, \bar{B})

6.3.2 Connection scheme 2

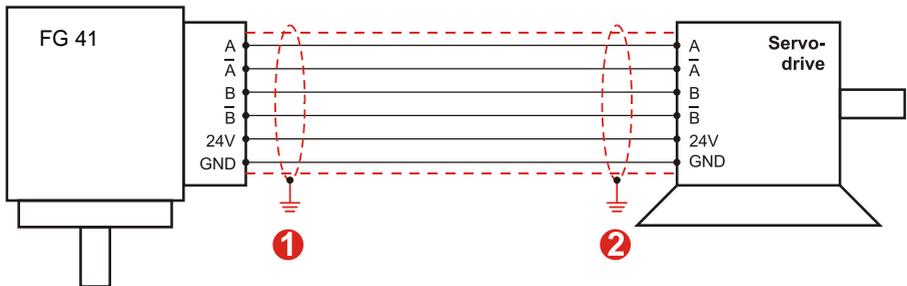

- 1x Ground connection (connection possibilities ① or ②)
- Avoid ground loops
- Connect all shields double-sided
- Shielding must not be interrupted
- Twisted pair wires (A, \bar{A}), (B, \bar{B})

6.3.3 Connection scheme 3

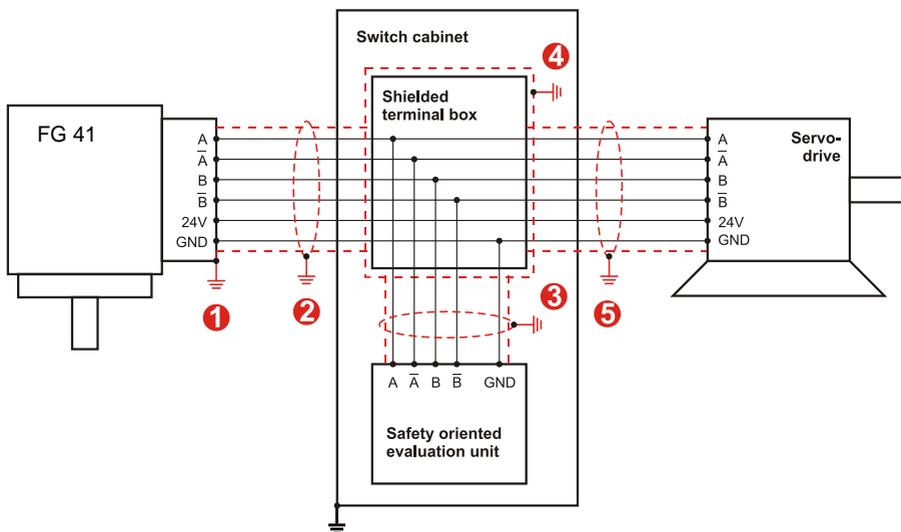

- 1x Ground connection (connection possibilities ①, ②, ③, ④ or ⑤)
- Avoid ground loops
- Connect all shields double-sided
- Shielding must not be interrupted
- Twisted pair wires (A, \bar{A}), (B, \bar{B})

6.4 Ground connection – measuring system

In principle, it is recommended that the ground connection of the measuring system has a good conductive connection to the functional earth of the machine.

(Cable with min. 4 mm²). An earthing terminal is provided on the measuring system for this purpose see dimension drawing HM 19 M 114093.

6.5 Cable specification

Variant 1, analog incremental signals (SIN/COS)

Signal	Description
Supply	Min. 0.34 mm ² and shielded, 0.5 mm ² recommended. Generally the cable cross-section must be matched to the cable length.
SIN, $\overline{\text{SIN}}$	Min. 0.14 mm ² and shielded, 0.25 mm ² recommended. However, to ensure the signal quality and to minimize possible environmental influences, we recommend twisting each signal pair (\pm).
COS, $\overline{\text{COS}}$	
(*) N, \overline{N}	

Variant 2, square-wave incremental signals (TTL/HTL)

Signal	Beschreibung
Supply	Min. 0.34 mm ² and shielded, 0.5 mm ² recommended. Generally the cable cross-section must be matched to the cable length.
0°, $\overline{0^\circ}$	Min. 0.14 mm ² and shielded, 0.25 mm ² recommended. However, to ensure the signal quality and to minimize possible environmental influences, we recommend twisting each signal pair (\pm).
90°, $\overline{90^\circ}$	
(*) N, \overline{N}	

(*) optional, the reference signal is not evaluated from a safety viewpoint

6.6 Permitted cable length

The permissible cable length at the transmission of incremental signals depends on the output frequency, the applied supply voltage and the ambient temperature of the measuring system, see the following diagrams.

6.6.1 Analog incremental-signals (SIN/COS)

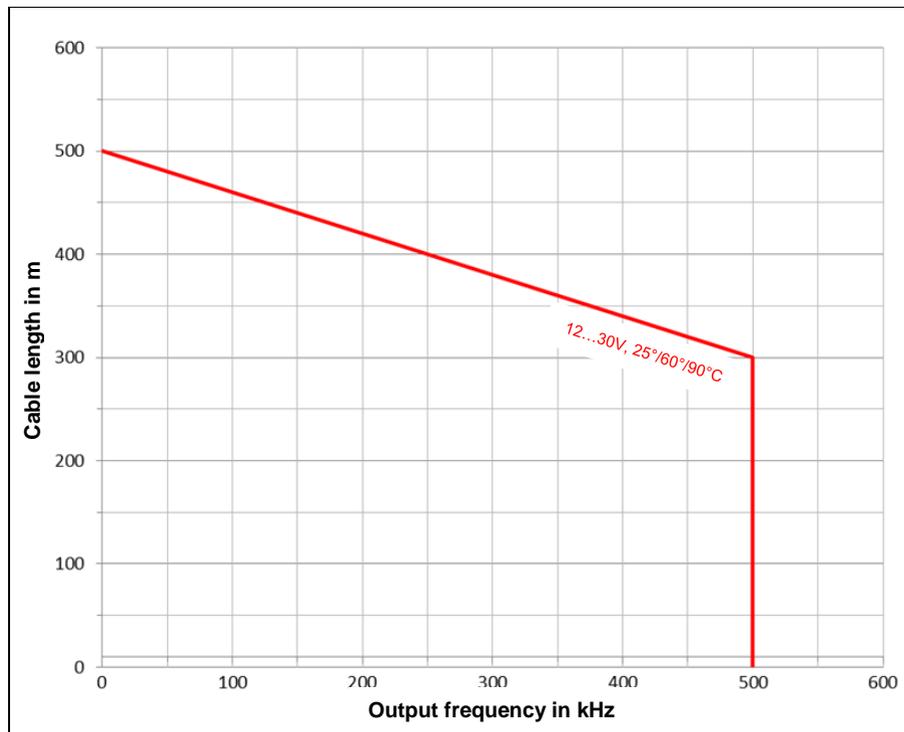


Fig. 3: Maximum permissible cable length for SIN/COS interface

6.6.2 Square wave incremental-signals (TTL/HTL)

TTL-Interface:

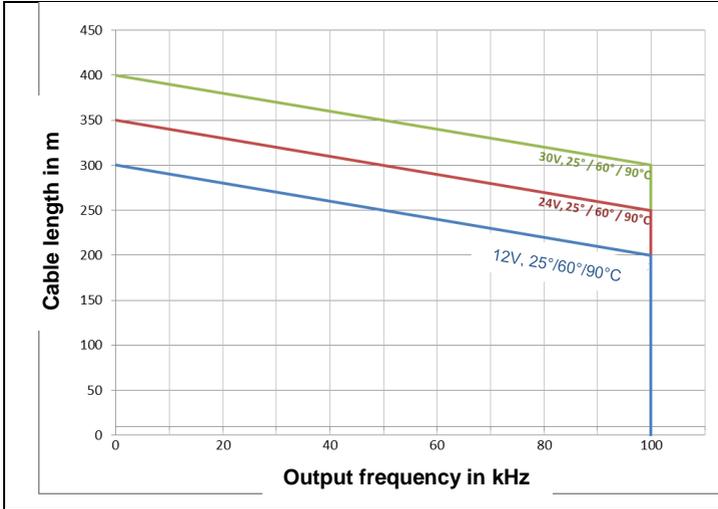


Fig. 4: Maximum permissible cable length for TTL interface

HTL-Schnittstelle:

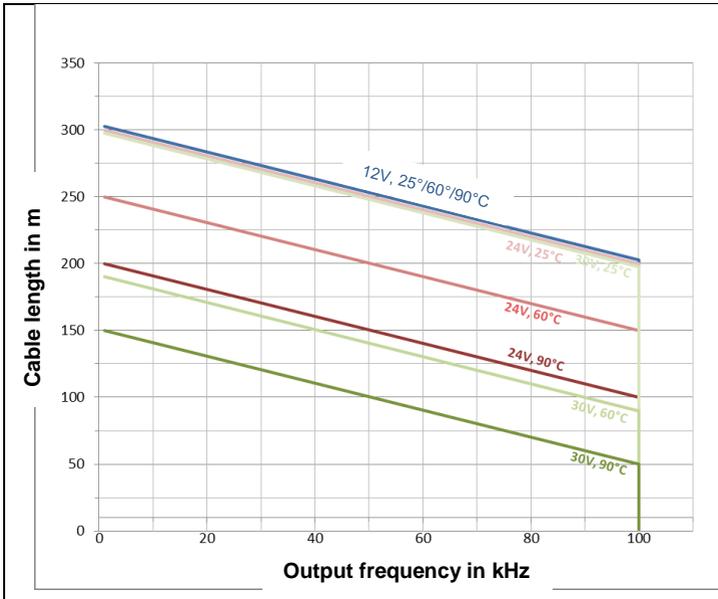


Fig. 5: Maximum permissible cable length for HTL interface

6.7 Connection instructions for plug connection

The electrical equipment features are mainly determined by the variable connection technology.



NOTES!

The connection can only be made in conjunction with the device-specific pin assignment!

When the measuring system is delivered, a printed version of the pin assignment is enclosed and can also be downloaded later.

7 Incremental interface



CAUTION!

Danger of damage to subsequent electronics due to overvoltages caused by a missing ground reference point!

- If the ground reference point is completely missing, e.g. 0 V of the power supply not connected, voltages equal to the supply voltage can occur at the outputs of this interface.
 - It must be ensured that a ground reference point is present at all times,
 - or the system operator must provide appropriate protective mechanisms for the subsequent electronics.
- If the input voltage exceeds 30 V, these voltages occur accordingly at the HTL outputs. This can lead to damage of the output or input circuit of the downstream processing unit.

The measuring system acquires the angular information from the connected process via the rotation of the shaft. A pulse disk is fixed to the shaft; this acquires the angular increments with a defined number of periods per revolution. A scanning unit with integrated optoelectronics generates electrical signals and outputs signal periods, which can be processed in a signal conditioner afterwards.

The resolution of the measuring system is defined by the number of light/dark segments (pulse number per revolution) on the pulse disk. A signal sequence of e.g. 1024 periods is output during one revolution. To evaluate the counting direction, a 2nd signal sequence with a 90° phase offset is output for the control.

The counter of an external control can be reset with an additional zero pulse, and the mechanics - control reference point can thus be defined.

7.1 Variant 1, analog incremental signals (SIN/COS)

The number of periods / revolution is dependent on the device variant. Resolutions of 1024, 2048 and 4096 periods / revolution are supported.

Measuring the signals against 0 V gives the following signal curve:

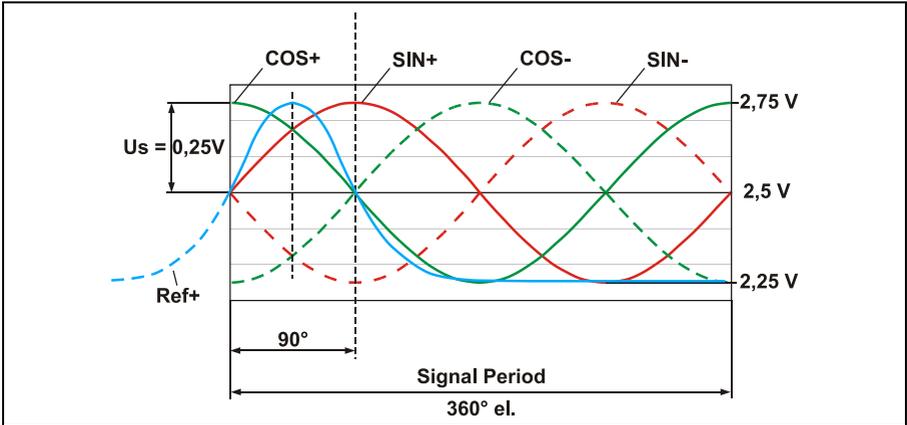


Fig. 6: Signal curve with clockwise direction of rotation looking at the flange connection

Differential measurement of the signals gives the following signal curve:

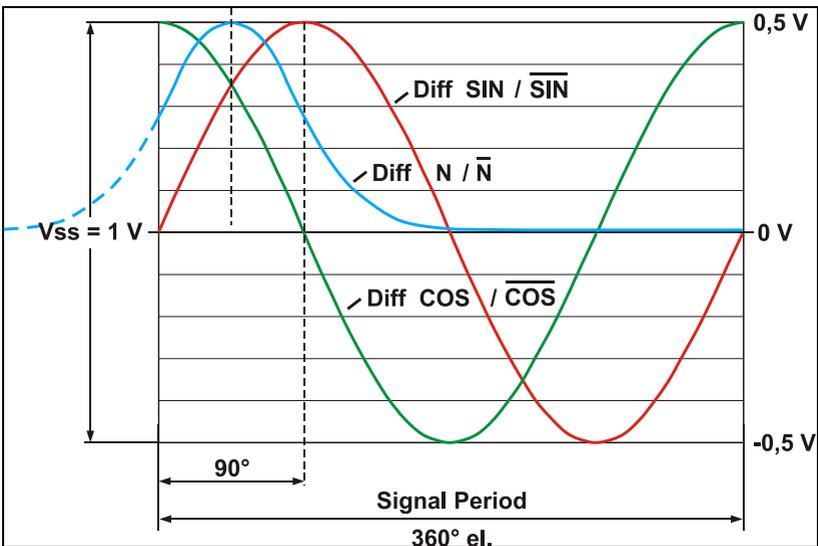


Fig. 7: Signal curve with clockwise direction of rotation looking at the flange connection

7.2 Variant 2, square - wave incremental signals (TTL/HTL)

The number of pulses / revolution is dependent on the device variant. Resolutions of 1024, 2048 and 4096 pulses / revolution are supported.

The output levels are also specified by the factory setting; TTL output stages and HTL output stages are supported.


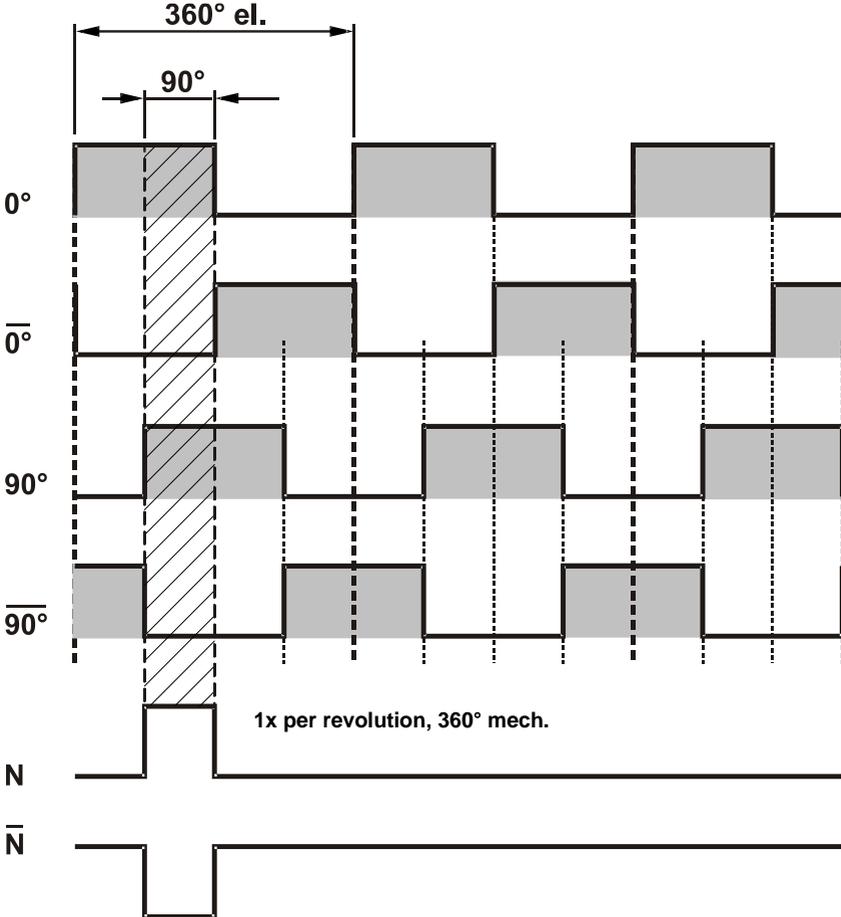


Fig. 8: Signal curve with clockwise direction of rotation looking at the flange connection

8 Connection diagram

Socket insert view

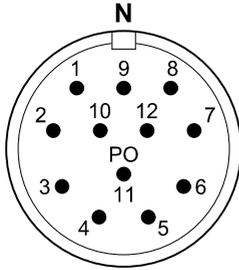

Shield:

The shield of the signal cable is connected at the socket housing.


Pin	Description
1	Output 0°
2	Output 0° Inverse
3	---
4	Output 90°
5	Output 90° Inverse
6	---
7	N *
8	\bar{N} *
9	---
10	---
11	Power Supply
12	GND

* optional

FG 41T

Connection diagram PN 228-400a

12-pole round plug
M23

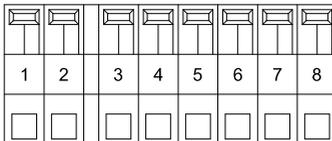

8 pole printed circuit spring terminal block type Phoenix ZFKDS

Connection data:

wire section
0,2-1,5 [mm²]

Shielding:

The shield of the signal cable has to be connected directly to the housing of the encoder by the cable gland.

Pin	Description
1	GND
2	Power Supply
3	Output 0°
4	Output 0° Inverse
5	Output 90°
6	Output 90° Inverse
7	Reference
8	Reference Inverse

FG 41K

Connection diagram PN 228-410

Terminal box

9 Replacing the Measuring System

The following points must be noted when replacing the measuring system:

- The new measuring system must have the same article number (ID) as the measuring system being replaced; any deviations must be expressly clarified with Johannes Hübner Giessen.
- The new measuring system must be installed in accordance with the specifications and requirements in chapter "Assembly" on page 25 .
- The new measuring system must be connected in accordance with the specifications in chapter "Connection instructions for plug connection" on page 38.
- Depending on the application, the output incremental value may need to be adjusted to the machine reference position.
- When recommissioning the replaced measuring system, correct functioning must be ensured first of all by means of a protected test run.

10 Checklist

We recommend that you print out and work through the checklist for commissioning, when replacing the measuring system and when changing the parameterization of a previously accepted system, sign it and store it as part of the overall system documentation.

Documentation reason		Date	Edited	Checked
Sub-item	To note	Can be found under		Yes
Present user manual has been read and understood.		Document no.: FG41_Manual-en_R0		<input type="checkbox"/>
Check that the measuring system can be used for the preset automation task on the basis of the specified safety requirements	<ul style="list-style-type: none"> Intended use Safety functions of the fail-safe processing unit Compliance with all technical data 	<ul style="list-style-type: none"> Chapter 2.3 <i>Intended use</i> on page 11 Chapter 2.5 <i>Safety functions of the fail-safe processing unit</i> on page 12 Chapter 4 Technical Data on page 19 		<input type="checkbox"/>
Fulfillment of the installation requirements defined in the user manual	<ul style="list-style-type: none"> Safe mechanical fixing of the measuring system and safe positive connection of the driving shaft with the measuring system 	<ul style="list-style-type: none"> Chapter 5 Assembly on page 25 		<input type="checkbox"/>
Requirement for the power supply	<ul style="list-style-type: none"> The power supply unit used must meet the requirements of SELV/PELV (IEC 60364-4-41:2005+A1:2017) 	<ul style="list-style-type: none"> Chapter 4.2 Electrical characteristics on page 20 Chapter 6.2 EMC requirements on page 32 		<input type="checkbox"/>
Correct electrical installation (shielding)	<ul style="list-style-type: none"> Observance of basic rules for installation Observance of wiring standards 	<ul style="list-style-type: none"> Chapter 6 Installation / Preparation for Commissioning on page 31 		<input type="checkbox"/>
System test after commissioning and modifications	<ul style="list-style-type: none"> During commissioning and after each parameter change all affected safety functions must be checked. 	<ul style="list-style-type: none"> Chapter 2.5 Safety functions of the fail-safe processing unit on page 12 		<input type="checkbox"/>
Device replacement	<ul style="list-style-type: none"> It must be ensured that the new device corresponds to the replaced device. All affected safety functions must be checked. 	<ul style="list-style-type: none"> Chapter 9 Replacing the Measuring System on page 42 		<input type="checkbox"/>

11 Maintenance



WARNING!

At inspection of the measuring system and the mounting, the basic safety instructions contained in chapter 2 must be observed.

The inspection of the measuring system and the mounting must only be carried out by qualified personnel!

The device is maintenance-free. However, to guarantee safe and fault-free operations we recommend that you carry out the following inspections of the measuring system and the mounting on a regular basis. Inspections must be recorded in a log book.

Interval	Inspections
Yearly	Ensure the fastening screws are properly tightened.
After approx. 16 000 – 20 000 hours of operation or higher levels of continuous load	Check deep groove ball bearings for noise, running smoothly. Bearings must be replaced by the manufacturer only.

12 Accessories

The accessories/spare parts listed below can be ordered from the service address on page 2 if required

12.1 Mating connector

Mating connector: BG-109647



12.2 Mounting kit friction-enhancing shims

Mounting kit friction-enhancing shims, order no.: ID 24806

for enhancing friction in screw connections

4 pcs. shims $\varnothing 20,9 \times 0,18$ mm

with friction-enhancing nickel diamond coating EKagrip® 35

(not included in the scope of delivery)

12.3 Coupling

We recommend our zero-backlash, torsion-resistant couplings with fault exclusion HKS(I) 5 (single joint couplings) or HKDS(I) 5 (double joint couplings) for mounting the FG 41.



The couplings meet the following requirements:

Description		Value	
shock resistance	(DIN EN 60068-2-27 (6 ms))	100 g	
vibration resistance	(DIN EN 60068-2-6 (8,7 ... 2000 Hz))	20 g	
torque		3 Nm	
Temperature range		-25°... +85° C	
max. speed		6000 rpm	
mounting accuracy	HKS 5 / HKS I 5:	axial offset:	± 1 mm
		angular:	0,5°
	HKDS 5 / HKDS I 5:	axial offset:	± 1,5 mm
		radial offset:	± 0,5mm

For further information please do not hesitate to contact our sales department.

13 Dimension drawings


13.1 FG 41, construction type B5

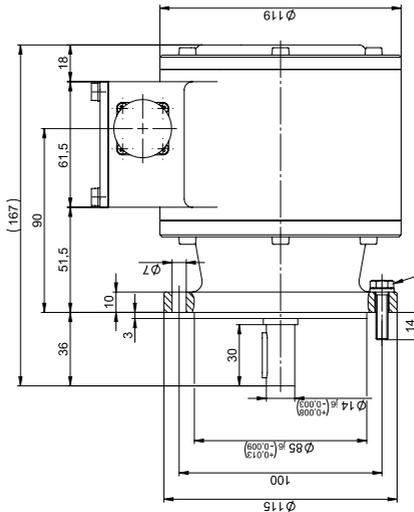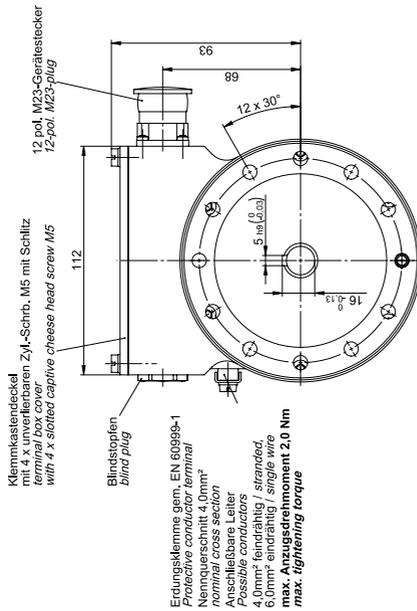

FG 41 T

12-pole round plug M23

HM 19 M 114093

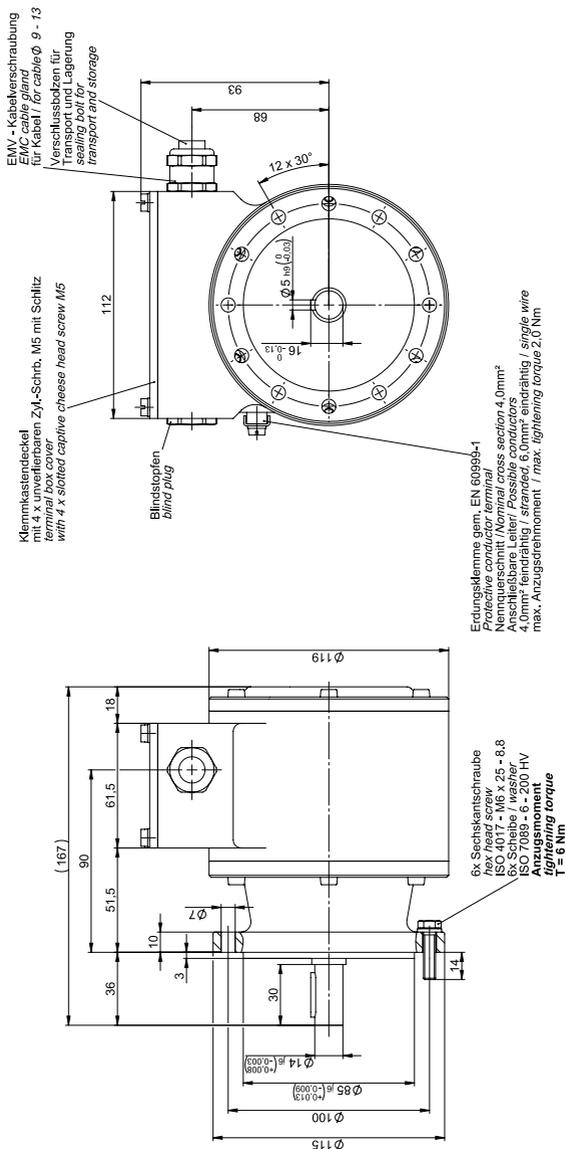


FG 41 K

Terminal box


HM 19 M 114100

13.2 FG 41 construction type B35 (flange and foot)

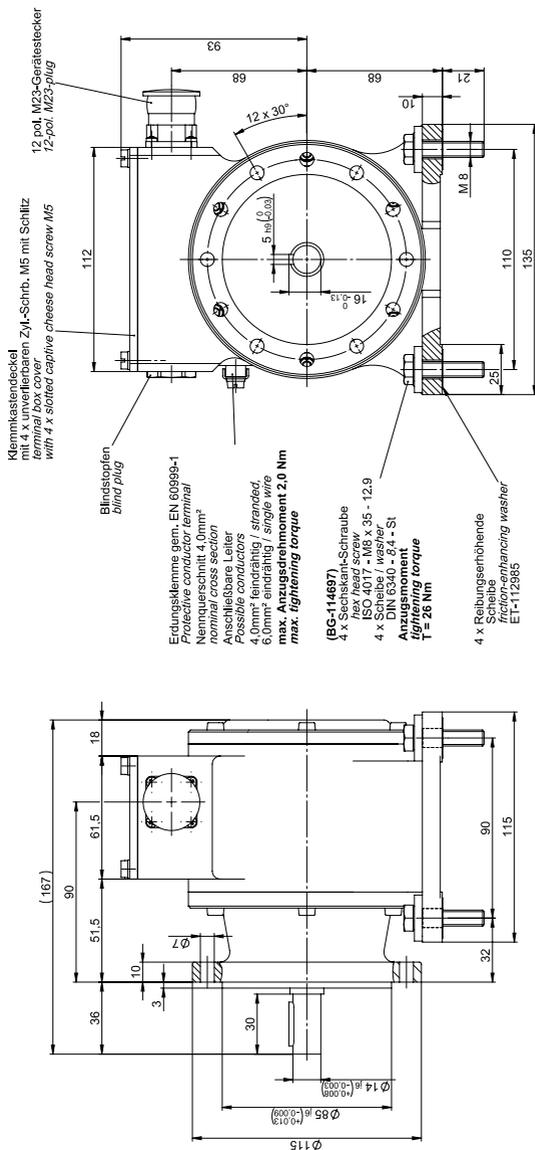


Siehe auch Betriebs- und Montageanleitung
See operating and assembly instructions

Ab einer Schockbelastung von 20 g müssen
reibungserhöhende Schleiben ET-112985
eingesetzt werden.
From a shock load of 20 g friction-enhancing
washers ET-112985 must be used.

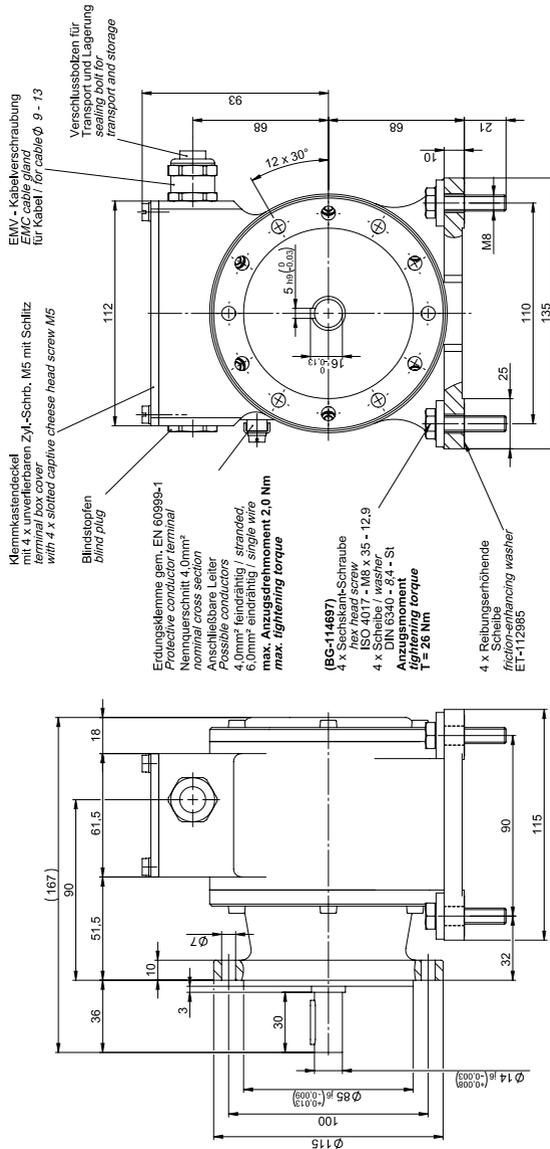


Siehe auch Betriebs- und Montageanleitung
See operating and assembly instructions

Ab einer Schockbelastung von 20 g müssen
reibungserhöhende Scheiben ET-112985
eingesetzt werden.
From a shock load of 20 g friction-enhancing
washers ET-112985 must be used.

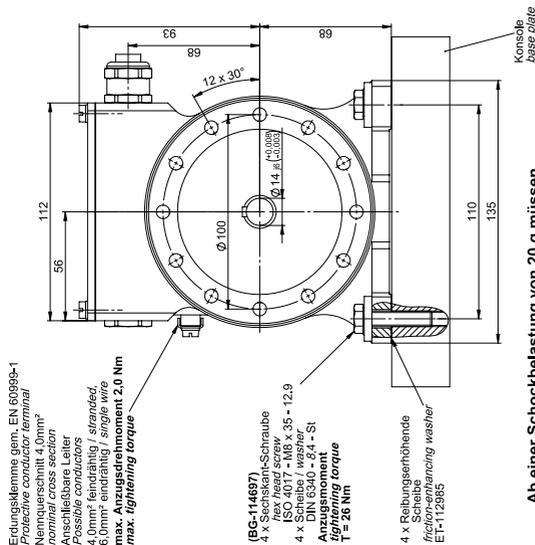


Ab einer Schockbelastung von 20 g müssen reibungserhöhende Scheiben ET-112985 eingesetzt werden.
From a shock load of 20 g friction-enhancing washers ET-112985 must be used.

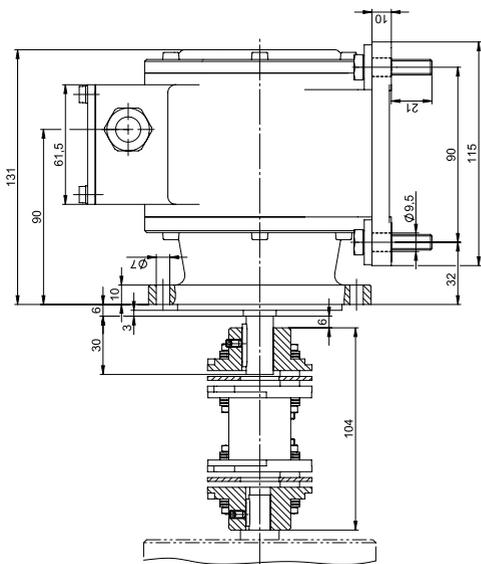

d ⁶⁷	t	u
11	12,8	4
12	13,8	4
14	16,3	5
16	18,3	5
20	22,8	6
max. bis 22	24,8	6

Andere Durchmesser siehe Kupplungsatlas
Other diameters see coupling catalog

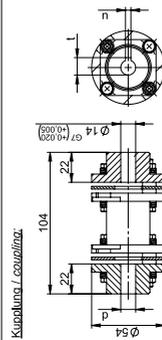

Verdrehtsteife Doppelgelenk-Kupplung
Torsion-resistant double-joint coupling
HKDS 522 - 14/ d
Montageanleitung / Mounting instruction

FG 41 K

Mounting Example construction type B35 and
coupling HKDS 522

HM 19 M 114336